APEX15


APEX hose pumps




Features and benefits

- Seal-less, valve-less design
- Precision machined hose elements for accurate, repeatable performance
- Optimized hose compression for unmatched flow stability
- Direct-coupled drive and maximum flexibility no separate couplings to align or maintain
- Ultra compact design with flexibility to mount standard gear motors rotor supported by own bearings to maximize gearbox life
- Lower maintenance costs single component change means fewer spare parts inventory

APEX15 performance

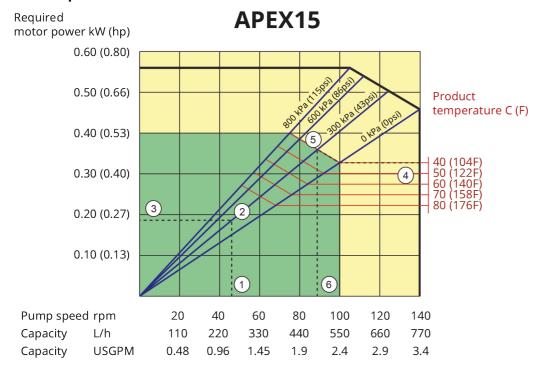

- 1. Flow required indicates pump speed
- 2. Calculated discharge pressure
- 3. Net motor power required
- 4. Product temperature
- 5. Calculated discharge pressure
- 6. Maximum recommended pump speed




* Maximum 3 hours operation followed by minimum 1 hour stop


Technical specifications

	APEX15
Max. flow rate continuous	550 L/h
Max. flow rate continuous	145 USGPH
Max. flow rate intermittent	770 L/h
Max. flow rate intermittent	203 USGPH
Volume per revolution	0.091 L
Volume per revolution	0.024 USG
Max. continuous operating speed	100 rpm
Max. intermittent operating speed	140 rpm
Max. operating pressure	8 bar
Max. operating pressure	116 psi
Suction pressure	0.05 bar abs
Suction pressure	0.73 psi abs
Max. inlet pressure	2 bar abs
Max. inlet pressure	30 psi abs
Operating temperature range	-20 to 45 °C
Operating temperature range	-4 to 113 °F
Fluid temperature range	-20 to 80 °C
Fluid temperature range	-4 to 176 °F
Min. starting torque	57 N m
Min. starting torque	505 in.lbs
Weight	40 kg
Weight	88 lbs
Hose lubricant required	1L
Hose lubricant required	0.26 USG
Port configurations	Down, Left, Right, Up
Compatible hose materials	CSM, EPDM, F-NBR, NBR, NBR for food, NR
Flange assembly type	ANSI, DIN

Materials of construction

	APEX15				
Hose material	CSM, EPDM, F-NBR, Natural rubber (NR), NBR, NBR for food				
Housing	Die-cast aluminum (RAL 3011)				
Rotor assembly	Cast iron				
Cover assembly	Die-cast aluminum, EPDM, PMMA				
Brackets and fasteners	Stainless steel 316				
Support frame	Galvanised steel				
Hose clamps	Stainless steel 316				
Coupling bush	Alloy steel				
Seals	EPDM, NBR				

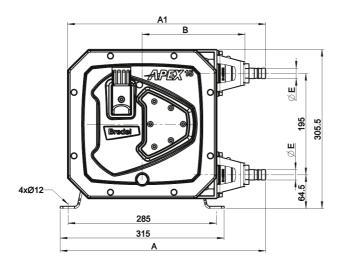

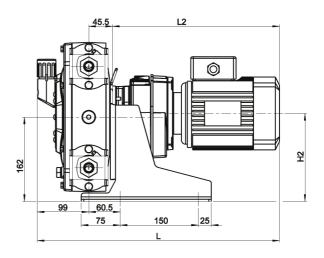

	Α	A1	В		E	H2max	Lmax		L2max	
APEX15 (mm)	394.5	380.5	197.5		Ø20	170	545.5		401	
APEX15 (inches)	15.5	15	7.8		3/4" NPT	6.7	21.5		15.8	
Connector sizes				MNPT		EN DIN		JIS		
APEX15				0.75"		20mm 2		20mm	mm	

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Bredel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Bredel are registered trademarks.

wmfts.com/global



04 January 2024